

## LIOBEX SPRING HINGES

### Spring Tension Adjustment Direction - (Z)

To apply tension to the spring hinges, turn the capstans to a **maximum of 6 holes** in the indicated direction (Z).

