




# Template

## CAUTION

Check backset required for lock before drilling 50mm hole


1 FOLD HERE ON DOOR EDGE

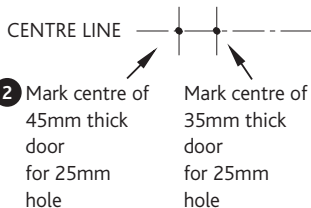

5 Drill 25mm hole in centre of door edge for latch

70mm BACKSET

60mm BACKSET

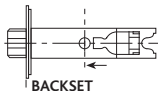

BACKSET: is length from edge of door to centre of 50mm hole

3 Mark for centre of 50mm hole on door face for 60mm backset

OR  
For 70mm Backset

4 Drill 50mm hole

